

1320S(BT-A41CN)

INSTRUCTIONS FOR USE

Gentle and Quick Thermometer with voice


Intended Use

The digital thermometer is intended for the measurement and monitoring of human body temperature.

Specifications

Specifications				
Measurement range	32.0°C~ 42.9°C			
Accuracy	35.0°C ~39.0°C: ±0.1°C Other range: ±0.2°C			
Low / High temperature display	Temperature<32.0°C: display: Lo°C			
	Temperature>42.9°C: display: Hi°C			
Fever beep Sound	Voice report, the temperature and remind you are fever			
[>37.8°C]	Voice report the temperature and remind you are fever.			
Normal beep sound (≦37.8°C]	Voice report the temperature.			
Auto power off	1 minute or 3 minutes after measurement			
Battery	1.5Vx3 , AG10			
Product Dimension	143 x 25 x 14.5 mm			
Net Weight	25g			

Product structure

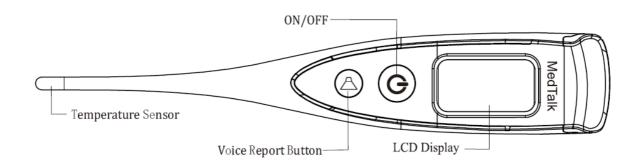

How to take your body temperature

188.8%

1. Press ON/OFF button to activate. The unit will beep and display

for 1 second.

- 2. Then, the last memory will be displayed. You will hear "please measure" after 2 seconds and the device will check itself and display "Err" if any problem occurs. At the same time it will speak "Error, please measure again!".
- 3. If self-checking result is normal, LCD will display "Lo °C" and start measurement, a beep sound will remind you when the measurement is finished in 8-10 seconds, voice report the result. If your body temperature is too high, will voice report the result and remind you are fever.
- 4. If you want to start another measurement, turn off the thermometer and then activate again. It will power off after standby for about 1 minute or 3 minutes after measurement. Or press ON/OFF key to shut off directly.
- 5. Press the Speaker symbol button measurement.

and the thermometer will recall and voice report the last

Language selection

Language selection: Under the thermometer is on off mode, press ON/OFF button holding for about 5 seconds till "01" display and release ,then press ON/OFF button to switch between "01", "02", "03", "04", "05", "06", a beep signal confirms each change. Language code as below for ref.:

Code	01	02	03	04	05	06
Language	German	English	Spanish	French	Russian	Italian

Replacing the battery

The battery in your digital thermometer need to be replaced when " property appears in the lower right corner of the display. Replace the battery with three 1.5V AG10 batteries or equivalent.

Precautions:

- 1. The thermometer should only be used under the supervision of an adult. It is not a toy for children. Please keep it out of children.
- 2. Do not walk, run or talk during temperature taking.
- 3. Store the unit in the protective case when not in use.
- 4. Dropping or subjecting your thermometer to strong shocks should be avoided.
- 5. Do not attempt to disassemble the unit, except to replace the battery.



FUDAKANG INDUSTRIAL CO., LTD, No. 8, Yinghe Road, Yuanjiangyuan

FANTRONIC COMPOSANTS Add: Rue Jacques Laurent ZA-Sud-Est-BP11-85150 LA MOTHE ACHARD-FRANCE Tel:+33 2 51088920 Fax:+33 2 5108862